

## AUTOPSY STATIONS



- **ELIMINATES BODY LIFTING, ONE PERSON OPERATION POSSIBLE**
- **SIMPLIFIED DESIGN & CLEANING**
- **ERGONOMIC SPACE SAVING DESIGN WITH CONTAINED WORK AREA**
- **WALL, COLUMN OR ISLAND VERSIONS.**
- **ACCEPTS STANDARD, SEMI-OBESE AND OBESE TRAYS**


The range of LEEC autopsy stations are fully compatible with either the LEEC Body Handling system, using a tray transfer principle or alternatively, a trolley based solution.

This innovative approach totally eliminates any manual handling and provides a fully integrated and compact solution, which contains the procedures in one area.

Fully compliant with HBN20, the stations are available in several versions. Wall mounted units can be built with rear 'linear' extract and power, incorporated into bespoke rear splash plates, if required.



**AUTOPSY STATIONS**

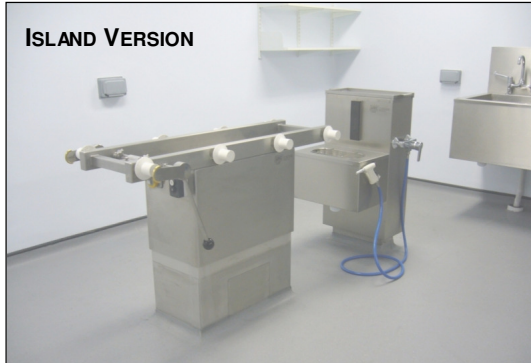

**ISLAND VERSION**



**COLUMN VERSION**

### FEATURES

- Wall, Island or Column versions available.
- Deep perimeter profile, special sink housings.
- Manufactured from 304 grade stainless steel.
- Large dissecting area to upper level.
- Gradient leading to integral sink bowl.
- Accepts standard, obese and obese-plus trays.
- Wide range of taps, sprays and hoses.

### OPTIONS

- Various widths and lengths.
- Instrument tray or perforated tool tray.
- Overbody or integral cutting boards / tables.
- Inner removable bowl and filter traps.
- Water sparge to dissecting area.
- Bespoke splashplate with power outlets.
- Extract spigots with removable canopies.

**LEEC Ltd**  
**Private Road No 7**  
**Colwick Ind. Est.**  
**Nottingham**  
**NG4 2AJ**

Tel: 0044 (0) 115 961 6222  
 Fax: 0044 (0) 115 961 6680

E-mail: sales@leec.co.uk  
 Website: www.leec.co.uk



REF  
C2-08